



GIFT CARD USAGE GUIDE NURIT RETAIL

- | | | |
|---------------|---------------|------------|
| 1. Sale | 4. Void | 7. Reissue |
| 2. Activation | 5. Balance | |
| 3. Add Value | 6. Deactivate | |

Sale:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press Enter at # 1 Sale
4. Key Amount \$\$. \$\$
5. Press Enter
6. Receipt Prints

Activate Card:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press **Forced arrow to # 2** Activate Card
4. Key amount \$\$. \$\$
5. Press enter
6. Receipt Prints

Add Value:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press **Forced arrow to # 3** Add Value
4. Key amount \$\$. \$\$
5. Press enter
5. Receipt Prints

Void:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press **Forced arrow to # 4** Void Sale Press Enter
4. Key amount, Press Enter
5. Press **Forced arrow** Press 1. Sale 2. Activate 3. Add Value
6. Enter Auth Code: From receipt, Press enter
7. Receipt Prints



GIFT CARD USAGE GUIDE NURIT RETAIL

- | | | |
|---------------|---------------|------------|
| 1. Sale | 4. Void | 7. Reissue |
| 2. Activation | 5. Balance | |
| 3. Add Value | 6. Deactivate | |

Check Balance on Card:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press **Forced arrow to # 5** Balance
4. Press enter
5. Receipt Prints

De-Activate Card:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
3. Press **Forced arrow to # 6** Deactivate
4. Press 1. Refund, 2. For without Refund
5. Enter Amount \$\$. \$\$
6. Press enter
7. Receipt Prints

Reissue:

1. Press the F3 key for Gift Card
2. Swipe Card or Key Enter
2. Press **Forced arrow to # 7** Reissue
3. Enter Old Acct: or Swipe Card
4. Press enter
5. Receipt Prints

Batching:

1. On the Nurit 2085, press batch
2. Press 1 for All
3. On the Nurit 3020, 8320 press func (blue key), and then press 2
4. Press 1 for All

GIFT CARD BALANCE

<http://www.giftbalance.com/>

Help Desk: 1-877-564-5656 option 1